SCOTT®

B8

STEREO PORTABLE MP3 / WMA / USB / CD PLAYER

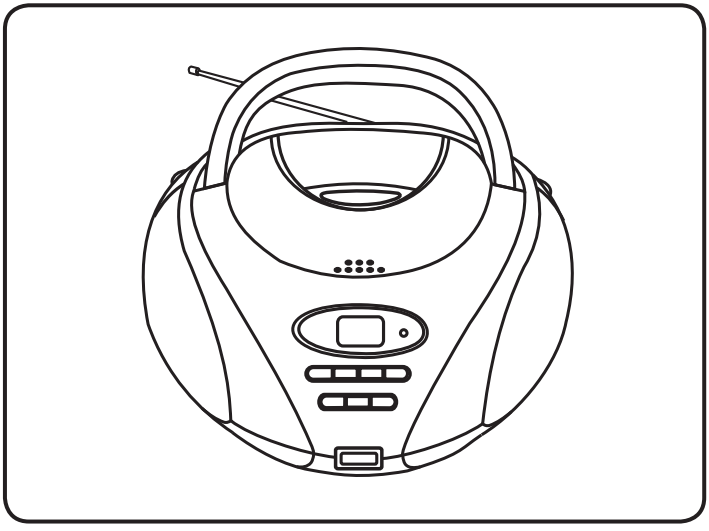

Instruction Manual

CE

WARNING

CLASS 1 LASER PRODUCT

CLASS 1 LASER PRODUCT
APPAREIL À LASER DE CLASSE 1
PRODUCTO LASER DE CLASE 1

CAUTION
INVISIBLE LASER RADIATION
WHEN OPEN AND INTERLOCKS
DEFEATED.
AVOID EXPOSURE TO BEAM

This product contains a low power laser device.

Warning: Do not touch the lens.

DO NOT THROW BATTERIES IN FIRE !

PRECAUTIONS

Follow the advice below for safe and appropriate operations.

ON PLACEMENT

- Do not use the unit in places which are extremely hot, cold, dusty, or humid.
- Place the unit on a flat and even surface.
- Do not restrict the air flow of the unit by placing it in a place with poor air flow, by covering it with a cloth, or by placing it on a carpet.

ON SAFETY

- When connecting and disconnecting the AC cord, grip the plug and not the cord itself. Pulling the cord may damage it and create hazard.
- When you are not going to use the unit for a long period of time, disconnect the AC power cord.

ON AC VOLTAGE

- Before use, check that the rated voltage of your unit matches your local voltage.

ON CONDENSATION

- When left in a heated room where it is warm and damp, water droplets or condensation may form inside the CD player.
- When there is condensation inside the unit, the unit may not function normally.
- Let it stand for 1 to 2 hours before turning the power on, or gradually heat the room up and dry the unit before use.
- Ensure a minimum distance of 5 cm around the apparatus for sufficient ventilation.
- Ensure that the ventilation is not impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc..
- Do not place naked flame sources, such as lighted candles on the apparatus.
- Take attention to the environmental aspects of battery disposal.
- Use the apparatus only in moderate climates.
- Do not expose the apparatus to dripping or splashing.
- Do not place objects filled with liquids, such as vases, on the apparatus.

Should any trouble occur, disconnect the AC power cord and refer servicing to qualified personnel.

The lightening flash with arrowhead symbol within the triangle is a warning sign alerting the user of "dangerous voltage" inside the unit.

CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN

ATTENTION : To reduce the risk of electric shock, do not remove the cover. There are no user serviceable parts inside the unit. Refer all servicing to qualified personnel.

The exclamation point within the triangle is a warning sign alerting the user of important instructions accompanying the product.

In case of misfunction due to electrostatic discharge the apparatus has to be reset by disconnecting it from mains supply.

THE MARKING PLATE IS LOCATED AT THE BOTTOM OF ENCLOSURE OF THE APPARATUS.

LOCATION OF CONTROLS

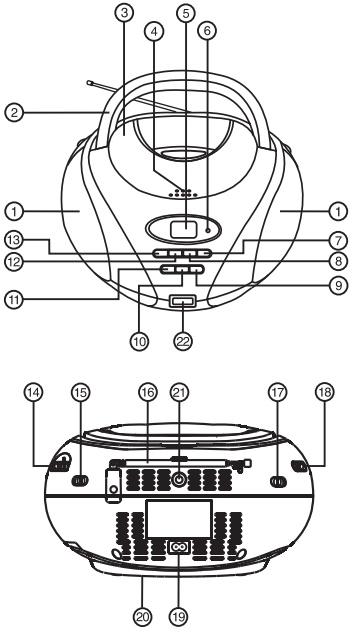

1. SPEAKER
2. CARRYING HANDLE
3. CD DOOR
4. OPEN/CLOSE CD BUTTON
5. CD DISPLAY
6. FM STEREO INDICATOR
7. CD PLAY / PAUSE BUTTON ▶II
8. CD NEXT BUTTON ▶▶|
9. CD FOLDER UP BUTTON
10. CD PLAY MODE BUTTON
11. CD PROGRAM BUTTON
12. CD BACK BUTTON |◀◀
13. ■ STOP / CD / USB BUTTON
14. TUNING CONTROL
15. MODE SWITCH
16. TELESCOPIC ANTENNA
17. FUNCTION SWITCH
18. VOLUME CONTROL
19. AC SOCKET
20. BATTERY COMPARTMENT
21. AUX. IN JACK
22. USB PORT

CD48USB SCOTT ESSENTIAL FM -ENGL3 3 2010/12/14 04:23:18

POWER SUPPLY

USING AC

Before use, check that the rated voltage of your unit matches your local voltage.

Note: Plug is used as the disconnect device.
The disconnect device shall remain readily operable.

USING BATTERIES

Disconnect the AC power cord from the AC inlet of the unit. Battery power is cut automatically by the cord while it is connected.

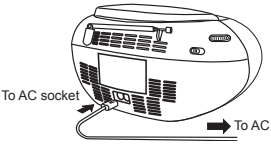

When the volume decrease, or the sound distorts, replace all of the batteries with new ones.

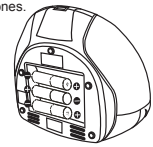

AUX. IN

An external (auxiliary) audio source (i.e., personal CD player or MP3 player) can be connected to this unit and heard through the speakers.

1) Plug one end of cable into the AUX IN socket on the unit.
2) Plug the other end of the cable into the Headphone or Line Out socket of the external source.
3) Set function switch on the unit to AUX.





Continue to operate CD or MP3 player as usual. Selections will be heard through the unit's speakers.

ADJUSTING THE SOUND

TO ADJUST THE VOLUME



LISTENING TO THE RADIO

1 . Set to RADIO

2 . Select a mode.



3 . Tune in to a station.

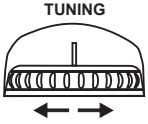

4 . Adjust the sound.



CD48USB SCOTT ESSENTIAL FM -ENGL4 4 2010/12/14 04:23:18

FOR BETTER RECEPTION

FM

NOTE : 1. FM stereo LED indicator lights if receive FM stereo broadcast and the MODE switch set on "FM STEREO".
2. When too much noise is heard during FM STEREO reception, set MODE switch to FM mono.

AFTER LISTENING

Set the FUNCTION selector to OFF.

COMPACT DISC PLAYBACK

1 . Set to CD

FUNCTION

CD

2 . Open the CD door by pushing Open / Close CD button.

3. Insert a disc with the label side facing up.

4 . Close the CD door.
The disc will rotate and the total tracks of the disc will show on the display.

5. Press the PLAY/PAUSE ▶❚❚ button.
Track number "01" & the symbol " ▶ " & "DISC" will be shown during normal compact disc playback.
Track number "001", the symbol " ▶ " & "DISC & MP3" will be shown during MP3 playback.
Track number "001", the symbol " ▶ " & "DISC & WMA" will be shown during WMA playback.
Track number "001", the symbol " ▶ " & "USB" will be shown during USB playback.



CD display

WMA display

MP3 display

USB display



TO INTERRUPT PLAYBACK

Press the Play/Pause ▶❚❚ button and the symbol " ▶ " will be flashed. Press the button again to resume playback.

CD display

WMA display

MP3 display

USB display



TO STOP PLAYBACK

Press the STOP / CD/USB button and the display shows the total tracks of the disc.



TO SKIP TO THE BEGINNING OF A TRACK

- Press either one of the ⏮ ⏭ skip buttons according to the desired skip direction.
- Play/back resumes from the selected track.
- When the ⏮ button is pressed once during play, the previous track starts again.
- When the ⏭ button is pressed once during play, the next track plays.

SEARCHING FOR A PASSAGE WITHIN A TRACK

- Keep the ⏮ or ⏭ button pressed during playback, and release the button as soon as you recognise the desired passage. Then normal CD playback will resume from this point.

CD48USB SCOTT ESSENTIAL FM -ENGL5 5 2010/12/14 04:23:18

REPEAT , REPEAT FOLDER , REPEAT ALL AND MIX PLAYBACK

Press PLAY MODE button during stop mode. CD plays with a single track repeat, all tracks repeat or randomly.



FOR NORMAL COMPACT DISC PLAYBACK
Mode sequence REPEAT >> REPEAT ALL >> MIX >> CLEAR.

During Repeat 1 mode, display shows

During Repeat 2 mode, display shows

During Mix mode, display shows

CD display

FOR MP3 / WMA / USB PLAYBACK
Mode sequence REPEAT >> REPEAT FOLDER >> REPEAT ALL >> MIX >> CLEAR.

During Repeat 1 mode, display shows

During Repeat 2 mode, display shows

During Repeat 3 mode, display shows

During Mix mode, display shows

MP3 / WMA / USB display

Note on CD-R/RW discs
- Because of non-standardized format definition/ production of CD-R/RW, playback quality and performance are not guaranteed.
- Manufacturer is not responsible for the playability of CD-R/RW due to recording conditions, such as PC performance, writing software, media ability, etc.
- Do not attach a seal or label to either side of the CD-R/RW disc. It may cause a malfunction.
- It is recommended to record only audio files on CD-R/RW discs for easy reading.

FOLDER UP

For MP3/WMA/USB playback, when the unit is at STOP mode, skip up to next folder/album at increasing order & it will show the folder/album number; press PLAY/PAUSE button to start the playback of the selected folder/album. When the unit is at MP3/WMA/USB PLAYBACK mode, skip up to next folder/album at increasing order & the folder/album number will flash for 3 seconds; then it will start playback of the selected folder/album.



USB OPERATION

1. Set to USB.
2. Connect USB disk or MP3 player into the USB port.
3. Press the STOP / CD / USB button and display will show total track & "USB".
4. Press the PLAY/PAUSE button to start playback.



USB display

note: USB connector does not support connection with USB extension cable and it is not designed for communication with computer directly.
Manufacturer is not responsible for the playability of USB disk or MP3 player due to recording condition, capacity, interface compatibility, etc.
Due to different formats, some USB disks or MP3 players may take longer time to be read.
USB stick is direct connected or with a cable with max. 0,5 m length.

CD48USB SCOTT ESSENTIAL FM -ENGL6 6 2010/12/14 04:23:19

PROGRAMMED PLAYBACK

PROGRAMMED PLAYBACK
FOR NORMAL COMPACT DISC PLAYBACK
Programmed playback enables tracks on a disc to be played in the desired order. Up to 20 tracks can be programmed.

1. Press the " PROGRAM " button.
2. Press the " NEXT " and " BACK " buttons to select the desired track number.
3. Press " PROGRAM " button again to memorize the track.
4. Repeat steps 2 and 3 until all desired tracks are programmed.
5. Press the " PLAY/PAUSE " button to start. " PLAY ▶ " & " PROG. " are shown on the CD display.
6. Press " STOP " button to stop programmed playback.
7. Press " PROGRAM " and " PLAY/PAUSE " buttons to resume programmed playback.
8. Open the CD door or turn off the CD player to clear the programmed memory.

Note : Programming can only be made when the player is in stop mode.



CD display
" PROGRAM "

FOR MP3 / WMA / USB PLAYBACK
Programmed playback enables folders/albums or tracks on a disc to be played in the desired order. Up to 20 folders/albums or tracks can be programmed.

1. Press the "PROGRAM" button.
2. Press the "FOLDER UP" buttons to select the desired folder number.

3a. For 'Folder programming', press "PROGRAM" button again to memorize the folder.
b. For 'Track programming', press the "NEXT" and "BACK" buttons to select the desired track number. Then, press 'PROGRAM" button again to memorize the selected track.

4. Repeat steps 2 and 3 until all desired folders or tracks are programmed.
5. Press the "PLAY/PAUSE" button to start. "PLAY ▶ ", "PROG." and "MP3" / "WMA / USB" are shown on the CD display.
6. Press "STOP" button once to stop programmed playback.
7. Press "PLAY/PAUSE" button to resume programmed playback.
8. Open the CD door, turn off the CD player or press "STOP" button twice to clear the programmed memory.

Note : Programming can only be made when the player is in stop mode.

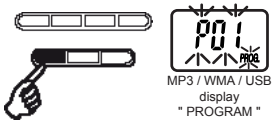

MP3 / WMA / USB
display
" PROGRAM "

MAINTENANCE

CLEANING CD
If the CD skips or will not play , the disc may need cleaning . Before playing, wipe the disc from the centre out with a cleaning cloth. After playing, store the disc in its case.

CLEANING THE CD LENS
If the CD lens is dusty, clean it with a brush-blower. Blow several times on the lens and remove the dust with the brush. Finger prints may be removed with a cotton swab moistened with alcohol.



CLEANING THE UNIT
Do not use volatile chemicals on this unit. Clean by lightly wiping with a soft cloth.

IMPORTANT NOTE
If an abnormal display indication or an operating problem occurs, disconnect the AC power cord and remove the batteries. Wait at least 5 seconds, then reconnect the AC power cord or reinstall the batteries.

WARNING
Should the CD door be opened before the reading of the CD is completed, a jamming noise may occur. This is resolved by closing the CD door.

CD48USB SCOTT ESSENTIAL FM -ENGL7 7 2010/12/14 04:23:19

SPECIFICATIONS

CD SECTION

Channels:	2 channels
S / N ratio:	60 dB
Wow & Flutter:	undetectable
Sampling frequency:	44.1 kHz 8 x over sampling
Quantization:	1 bit DA converter
Pick up light source:	Semi - conductor laser
Pick up wave length	790 nm

RADIO SECTION

Tuning ranges:	FM 87.5 - 108 MHz
Antennas:	FM Rod antenna

GENERAL

Output power:	0.85 W + 0.85 W (RMS)
Power consumption:	7 W
Speaker:	2 ½ " 8 OHM
Power source:	AC : 230V ~ 50Hz DC : 9V (6 x 1.5V LR14/ "C"/UM2)
Dimensions:	248(L) x 252(D) x 130(H)mm
Weight	1.46 KGS

Due to continuing improvement, the features and the design are subject to change without notice.

Where to place the item :

Today's furniture is coated with a wide variety of lacquers and synthetic-coatings that are treated with an extensive range of cleaning products. Therefore, the possibility that some of these substances contain components that react adversely to the rubber feet of the item and soften them, cannot be completely excluded. The rubber feet of the appliance can cause discoloring to furniture surfaces. If necessary, place the appliance on a non-slide surface.

If at any time in the future you should need to dispose of this product please note that Waste electrical products should not be disposed of with household waste.Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.
(Waste Electrical and Electronic Equipment Directive)

CD48USB SCOTT ESSENTIAL FM -ENGL8 8 2010/12/14 04:23:19